 


Flashlight DVR User Manual



know your product

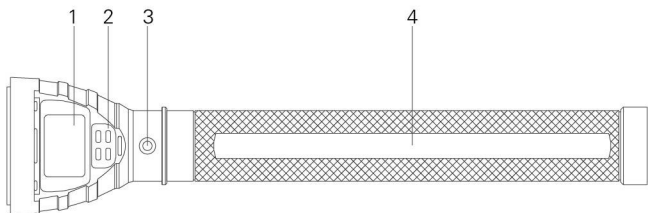

5



6

- | | |
|------------------|-----------------------------|
| 1. LCD screen | 4. Battery compartment |
| 2. Function keys | 5. Strap for Flashlight DVR |
| 3. ON/OFF switch | 6. Micro-USB cable |

Install battery before use: Turn the end cap and place 4*D size battery into the battery compartment and full closed the end cap. Insert Micro SD card before turn on the camera.

Device support



Trans by micro USB



Max support 64G TF Flash



4 D size 1.5V battery

Function buttons



PLAY

Hold: turn on/off the power
Press: into the view mode, play/pause (confirm key in system settings)



MENU

Hold: enter/quit the system settings
Press: view mode: delete/protect/slide show (switch key in system settings)



VIDEO

Hold: enter the video mode
Press: start/stop video recording (up key in system settings)



PHOTO

Hold: enter the camera mode
Press: take a photo (down key in system settings)

Video Mode



Hold  enter the video mode

Press  to start/stop record video


Photo Mode





Hold  enter the photo mode

 
Press  to start/stop record video

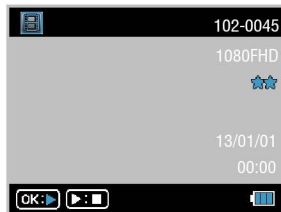View Mode



Press  enter the view mode

Press  pageup and press  pagedown to view the photo/video

In the video view mode, press  play the video

View Mode-Menu



Press **M** enter the view mode option

Press  &  up/down to choose

press  to confirm the option

View Mode-Menu Options

Delete

Delete current / delete all

 
Protect

current / unlock current / Lock all / Unlock all Locked video can't be deleted.

Slide Show

2 sec / 5 sec / 8 sec

System Settings-Video

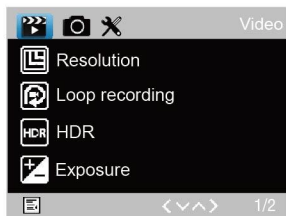


In any mode hold **M** into system settings

Press **M** switch to the setting of video settings

Press  &  up/down to choose the option

Press  enter the details settings

 Hold **M** quit the system settings

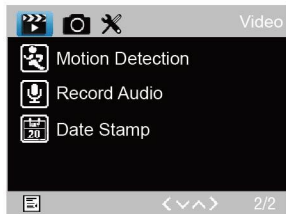

System Settings-Video Options

Resolution

1080FHD (1920x1080) / 720P (1280x720) / WVGA(848x480) / VGA (640x480)

Loop Recording

Off / 3 min / 5 min / 10 min

HDR

Off / On

Exposure

+2.0,+5/3,+4/3,+1.0,+2/3,+1/3,+0.0,-1/3,-2/3,-1.0,-4/3,-5/3,-2.0

Motion Detection

Off / On

 
Record Audio

Off / On

Date Stamp

Off / On

System Settings-Photo

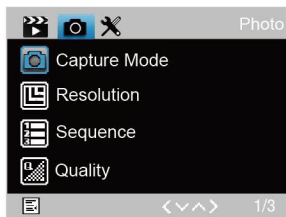



In any mode hold **M** into system settings

Press **M** switch to the setting of photo setting

Press  &  up/down to choose the option

Press  enter the details settings

  Hold **M** quit the system settings

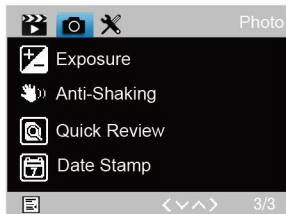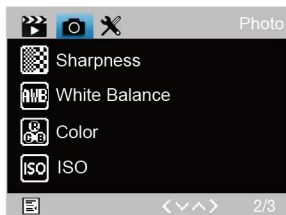

System Settings-Photo Options

Capture mode

Single / 2S timer / 5S seconds / 10S timer

Resolution

12M / 10M / 8M / **5M** / 3M / 2M / 1.3M / VGA

Sequence

Off / On

Quality

Fine / **Normal** / Economy

Sharpness

Strong / **Normal** / Soft

White Balance

Auto / Daylight / Cloudy / Tungsten / Fluorescent

Color

Color / black & white / Sepia

ISO

Auto / 100 / 200 / 400

Exposure

+2.0, +5/3, +4/3, +1.0, +2/3, +1/3, **+0.0**, -1/3, -2/3, -1.0, -4/3, -5/3, -2.0

Anti-Shaking

Off / On

 
Quick Preview

Off / **2 Seconds** / 5 Seconds

Date label

Off, Date, **Date/ time**

System Settings

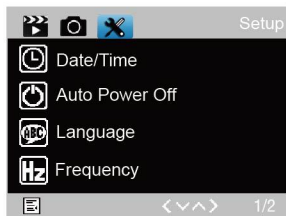


In any mode hold **M** into system settings

Press **M** switch to the setting of system

Press  &  up/down to choose the option

Press  enter the details settings

 Hold **M** quit the system settings

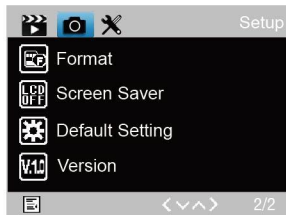

System settings-Option

Date / Time

YY/MM/DD, MM/DD/YY, DD/MM/YY

Auto Power Off

Off / 3 min / 5 min / 10 min

Language

English / French / Spanish / Portuguese / German /Italian / Traditional Chinese Simplified Chinese / Russian / Japanese

Frequency

50Hz/60Hz

Format

SD card

Screen Saver

Off / 30 sec / 1 min / 2 min

Default Setting

Return menu setting to defaults

Version

Connect the computer



Connect PC with micro USB cable
press  &  up/down to choose
the detail option

Use the  to confirm the option

Warranty items

Limited One Year Warranty

This warranty covers any defects or malfunction in your new AMO flashlight DVR for one year from date of purchase.

AMO will replace or repair any defective or malfunctioning device, within the warranty period, at no charge. The warranty does not cover damage resulting from accident, alteration, misuse or abuse. The device must be sent to our service center at your expense.

Should you require service please contact us first before returning the unit to us. Return instructions can be found on our website at www.amo-tech.cn under the Support option.

Upon receiving the returned device, it will be inspected and replaced or repaired if found defective. The unit will be shipped back to you within five business days at our expense.